

Stratos is one of the most beautiful roof tiles on the market. It's a practical and strong roof covering with the traditional ceramic roof tile look. The perfect choice if you would like to combine strength and design.

Stratos is produced in high quality steel. Compared to other roof coverings it has an advantage of the very low weight. A weight of approx. 5kg/m² makes it easy to handle and mount.

Stratos is precovered with numbers of layers with the important zinclayer as a base. The roof tile is offered in various surfaces and colours.

PREPARATIONS

Measure the roof's diagonals to check that the roof is straight. Variations of up to 30mm is handled by the roofside fittings. If you have bigger variations the roof should be corrected. Check that the roofpaper is ok. If not you need to repair this and also the wooden planks. Check that the roof is even. Decide of numbers of sheets and different length.

GENERAL ADVICES

Cutting

Use nibbler for cutting. Never use grinding tools as this will damage the surface of the steel sheets.

Surface repair

If damages occurs during mounting these should be repaired with appropriate improvement paint. All cutting edges should be painted.

Walking on the roof

Use soft shoes when walking on the roof. Always step in the lower part of the profile and always on a point over the mounting beams. Make sure that the sheet is fixed with screws before walking on it. Never leave the roof with loose sheets on it.

Storing during short period

Store the bundles with sheets min. 200mm over the ground. The sheets should also be stored with an angle so that water could be drained. Cover the bundles with plastic and make sure that proper ventilation is achieved under the plastic.

Storing during longer period

Storing longer times should be inside in a dry warehouse.

Roofangle

Measure the angle of the roof. The angle should be minimum 14 degrees.


Cleaning

After mounting it is important to remove all dust and rest products from cutting and drilling.

MOUNTING

1. Recommended beam distance


Use beams of approx. 40x50mm and ribs of approx. 12x25mm. The ribs should be mounted with c/c 600mm. The beams as per figure 1.

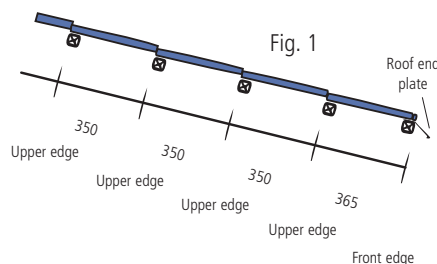

To make the work easier you could mark the positions for the beams on the ribs.

2.Overlap

When the length of roof requires more than one sheet you mount with overlap as per figure 2.

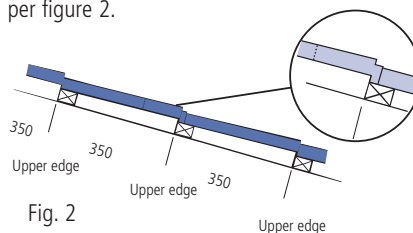

2.Overlap

Make sure that the last beam is parallel to the roofridge.

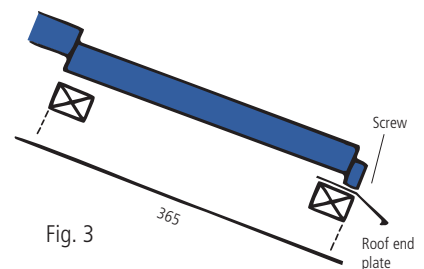


Fig. 3

When needed make hole in the beam for the gutterbrackets before mounting the roof end plate. Mount the roof end plate provisionally with nails. Final mounting is done when you mount the steel sheet with screws. The overlap should be minimum 60mm.

4. Mounting order

Mount the sheets from right to left. When using multiple sheets in length please mount as in figure 4.

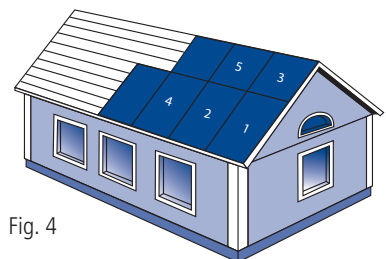


Fig. 4


Use lower beam as indicator for first sheet. It is very important that the first sheet is mounted correctly for the whole installation.

Check how the last sheet will end at the other side and decide whether you should cut some part also from first sheet. Press the overlap sheets properly against the underlap sheets to avoid gaps.

5. Fastening

Use prepainted galvanised screws (self drilling) 4,8x35mm. For mounting in beams of steel use prepainted drill screw 4,8x20mm. Use power driver. Place screws as per figure 5.


Fig. 5

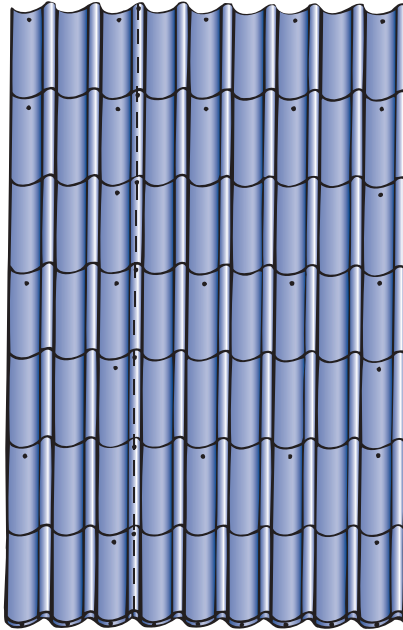

Place screws at every second lower part of profile and also every second tile. At the roof end and also along the overlap place screw in every lower part of profile.

6. Roofridge

Fig. 6

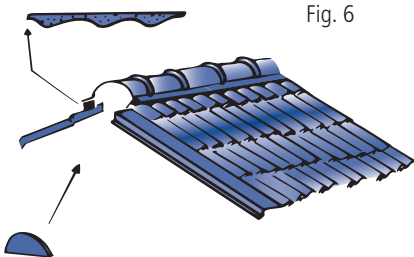

First mount the roofridgeend in the first roofridge. Align the roofridge and mount with screws in every second top of profile. Also mount the weatherstrip at the same time. The roofridge should be mounted with overlap screws (self-drilling) 4,8x20mm.

7. Roodsides

Align the roodsides plates as in figure 7A. If you need to cut the rooftiles in the lower part of the profile along the roodsides you should have a bend to get same height as top of profile (see figure 7B). The roodsides plates are mounted with overlap screw (self drilling) 4,8x20mm. The roodsides plates are mounted with an overlap of 100mm.




Fig. 7A

Fig. 7B

8. Roof angle plate

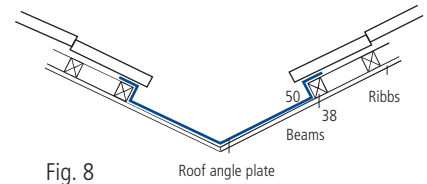


Fig. 8

The overlap between the roof angle plates should be minimum 200mm and it should be sealed with filler. The roof angle plate is mounted with nails in the lower beam c/c 300mm.

Combination table for Stratos in standard lengths.

400mm, 1100mm, 2150mm and 3550mm

Using	Effective length,mm
1 x 400	400
2 x 400	750
1 x 1100	1100
1 x 400 + 1 x 1100	1450
2 x 400 + 1 x 1100	1800
1 x 2150	2150
1 x 400 + 1 x 2150	2500
2 x 400 + 1 x 2150	2850
1 x 1100 + 1 x 2150	3200
1 x 3550	3550
1 x 400 + 1 x 3550	3900
2 x 400 + 1 x 3550	4250
1 x 1100 + 1 x 3550	4600
1 x 400 + 1 x 1100 + 1 x 3550	4950
2 x 400 + 1 x 1100 + 1 x 3550	5300
1 x 2150 + 1 x 3550	5650
1 x 400 + 1 x 2150 + 1 x 3550	6000
osv.	

Product information

Covering width:	1100 mm
Profile height:	24 mm (+16 mm alt. +20 mm in tilestep)
Thickness:	0.40 – 0,50 mm
Weight:	4,40 kg/m ² (0,50 mm)
Length:	400 - 6000 mm
Standard length:	400, 1100, 2150, 3550 mm
Steplength:	350 mm standard (we also produce 400mm)
Overlap:	50 mm
Coatings:	Polyester 25µm Matt polyester 35 µm KARAT, Structured KARAT 45 µm

Please contact your local sales representative for more info.
 Areco Sweden AB Areco Sweden AB
 Vinkelgatan 13 Västeråsvägen 9
 211 24 Malmö, Sweden 734 51 Kolbäck, Sweden

© 2009 Areco. All rights reserved. ARE 02024-02 01/2009
 For more information visit www.areco.se

areco®